


Accessories bar assembly instructions for Apollo carts

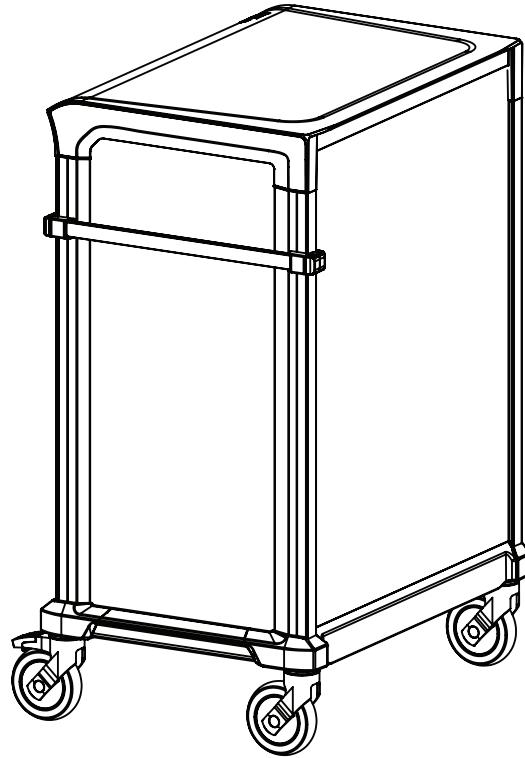


1


X2



Remove one side of
the sticker

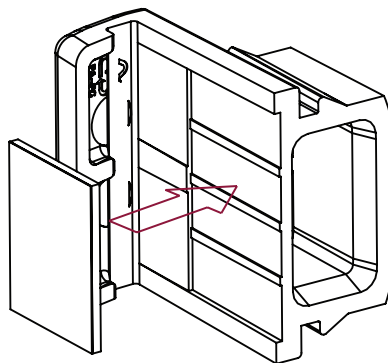

Place the sticker on
the connector

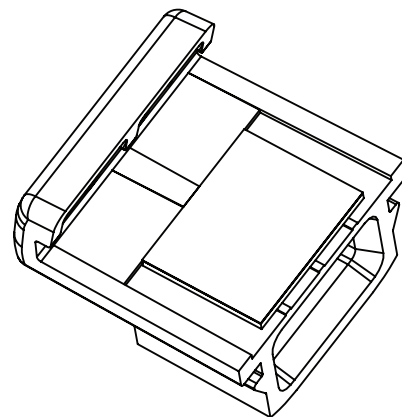


Pic for reference

2

Assemble 2 plastic parts with
1 screw, 2 washers and 1 nut.

X2

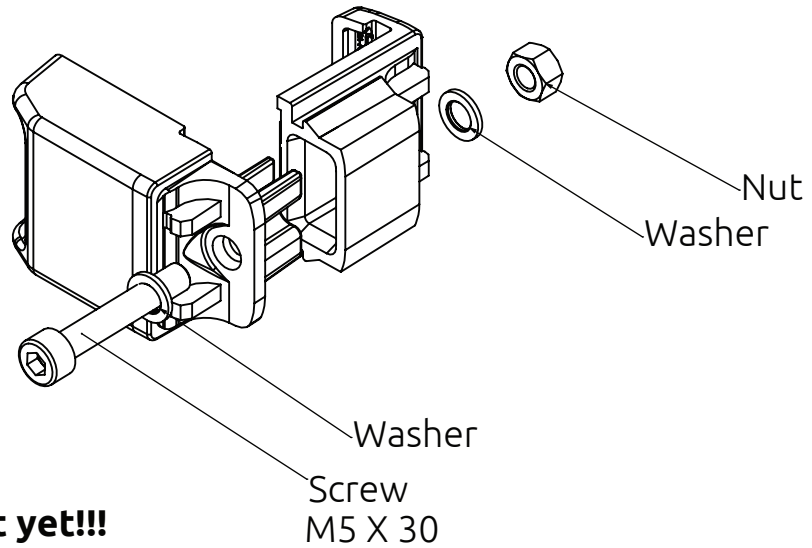


Do not tighten the nut yet!!!

3


X2

Remove frontal sticker cover

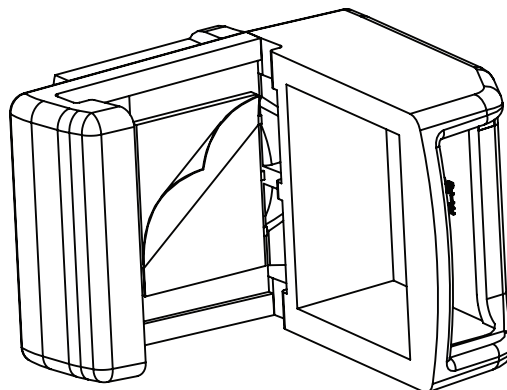

4


Insert the profile between the 2 plastics.

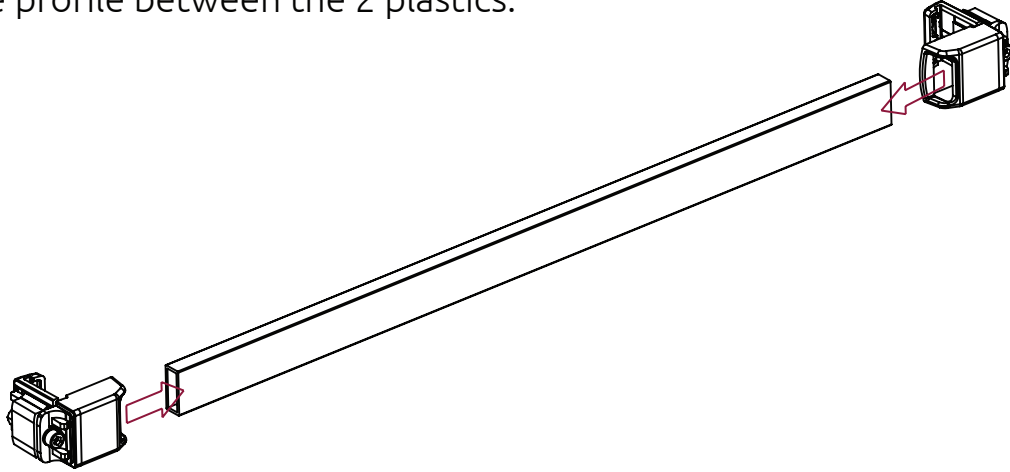

5

Place the accessories bar at the desired location using a leveler.

**After adjusting the right position,
tighten the screw on both sides.**

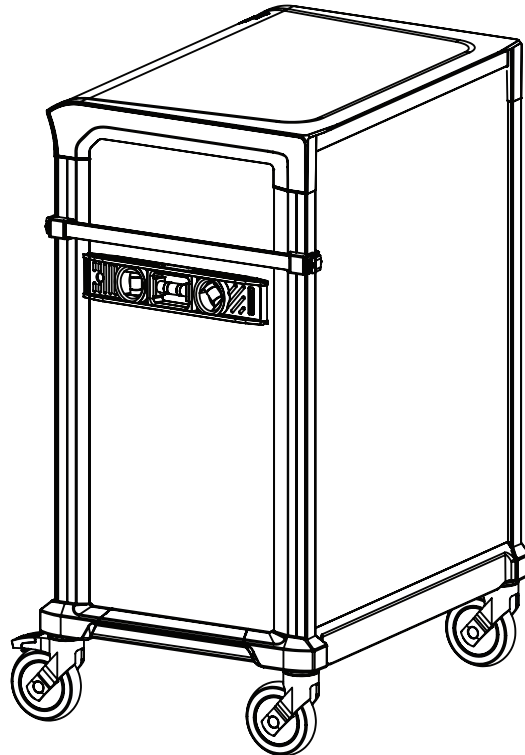

6

Use 2 plastic covers to close the connectors.

